



ACCELSIOR S



Package Contents

- OWC Accelsior S PCIe card (SSD not included)
- Phillips screws (4)

System Requirements

Mac Requirements

- OS X 10.6.8-10.11.6
- macOS 10.12 and later
- Intel-based Mac with available PCIe slot capable of supporting an x2 PCIe card. For optimal performance, use a PCIe 2.0 slot running at x4 speeds or greater.

PC Requirements

- Windows® Vista and later
- Any PC with available PCIe 2.0 or 1.0 slot capable of supporting an x2 PCIe card. For optimal performance, use a PCIe 2.0 slot running at x4 speeds or greater.

Supported Drives

Any 2.5" SATA hard drive (HDD) or solid state drive (SSD)

Technical Support



Phone: M–F, 8am–5pm Central Time
(866) 692-7100 (N. America)
+1 (815) 338-4751 (International)



Chat: M–F, 8am–8pm Central Time
www.owcdigital.com/support



Email: Answered within 48 hours
www.owcdigital.com/support

QUICK START GUIDE

Hardware Installation

Before you proceed:

- Power off the computer and disconnect its power source.
- Disconnect all peripheral devices from the computer.
- Take proper electrostatic discharge precautions (see below).




Your computer is a static-sensitive device. It is susceptible to invisible damage if not protected during installation. For proper grounding, we recommend using a grounding strap. Work in a clean, static-free area, and avoid wearing clothing that retains static charges.


www.owcdigital.com/support/anti-static

- STEP 1:** Remove the Accelsior S from its packaging and set it down on a flat surface with the black SATA connector facing up.
- STEP 2:** Install the 2.5 inch SATA drive of your choice. Detailed instructions with photos are available on the back of this document.
- STEP 3:** Install the Accelsior S in a compatible PCIe slot and secure it to the computer chassis according to its specifications.


See Reverse

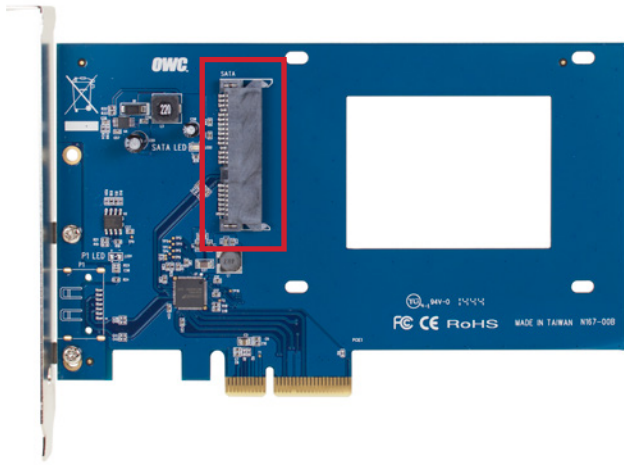


- 1 Set the OWC Accelsior S down on a flat surface. Make sure the black SATA connector is facing up, as shown above.

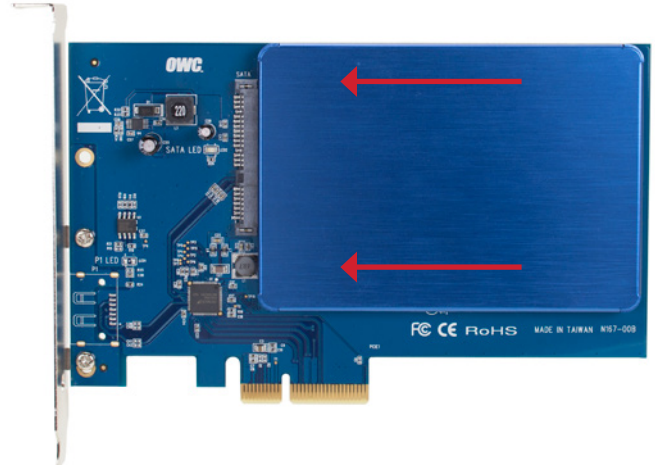

- 2 Slide the SATA connector on the drive into the SATA connector on the Accelsior S. Ensure the drive is fully seated, as shown.

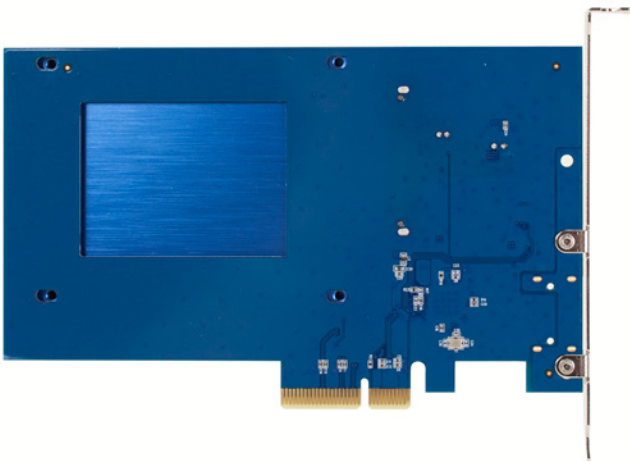

- 3 Holding the drive securely to the Accelsior S, turn over the Accelsior S.

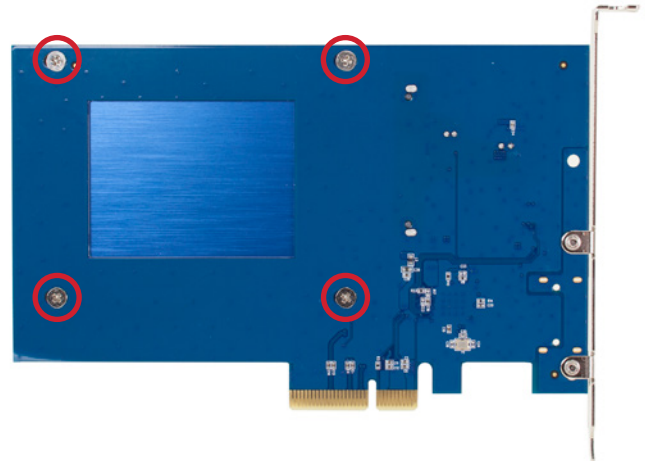

- 4 Install the four Phillips screws into the four screw holes to secure the drive to the Accelsior S, as shown.

Copyrights and Trademarks:

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of OWC.

© 2018 Other World Computing, Inc. All rights reserved.

OWC and the OWC logo are trademarks of New Concepts Development Corporation, registered in the U.S. and/or other countries. Apple, Mac, macOS, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Other marks may be the trademark or registered trademark property of their owners.

For up-to-date warranty information, please check the product web page.